FIXTURE INSTALLATION GUIDE

Model 1WW Series (One Light Swingarm 12V)


1WW, Rev.4 7-13




6695 Taylor Rd. Blacklick, OH 43004 www.besalighting.com

CAUTION: Turn off power to electrical box before installing

- 1. Carefully remove parts from package.
- 2. Remove the two Decorative Cap Nuts (A) to release the Mounting Bracket (B).
- 3. Attach the Mounting Bracket to the Outlet Box (C) with two Machine Screws (D) provided.
- 4. Connect the electrical leads from the fixture tranformer to the house supply wires, black to black and white to white, and secure with wirenuts provided (E). Attach the house ground wire to the bare copper lead from the Canopy (F), and secure with the provided wirenut.
- 5. Align the circular openings on the canopy with the Threaded Posts (G) on the Mounting Plate. Push the Canopy over the Threaded Posts until the Canopy is flush with the wall, then secure with the Decorative Cap Nuts.

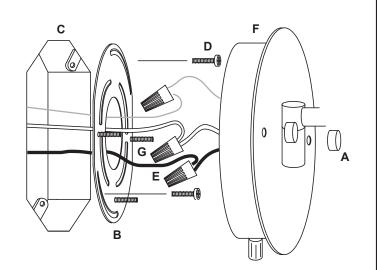

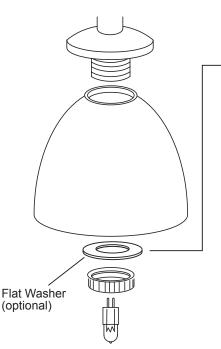

6. To attach the glass, you must first remove the Threaded Checkring and Washer from the socket. Place the glass shade over the socket and secure with the Threaded Checkring.

NOTE: If you are using our oval-shaped 551007 glass, with a slightly oversized opening, you will need to use the Washer provided.

7. Install the 50 watt Bipin Low Pressure Halogen bulb provided. When relamping this fixture it is important to use a Low Pressure Halogen bulb.

Relamp with a low-pressure type lamp. Packaging of this lamp will typically indicate that it's "Suitable For Use in an Open Fixture" or marked with the symbol shown.



- 8. Restore power.
- The On/Off operation and brightness level is controlled by the Rotary Knob located at the underside of the canopy. Simply rotate clockwise to increase brightness.