

# INSTALLATION GUIDE

Model R12-NDCAP Rail End Cap

(For use with Besa low voltage lighting systems only)

TNDCAP-SN, Rev.1 7-09



**BESA** LIGHTING

6695 Taylor Rd. Blacklick, OH 43004

[www.besalighting.com](http://www.besalighting.com)

1. Push the Rail End Cap securely onto the Rail Section.
2. If End Cap does not seat properly, then the end of the Rail may have been slightly distorted when being cut. Carefully clean the edges with a file, then reinsert the End Cap.

