## FIXTURE INSTALLATION GUIDE

Model Wanda and Zito LED (1 Light Low Voltage LED Flat Canopy)


1XT\_Wanda\_Zito\_LED, Rev.1 6-15



**IMPORTANT:** This 6W LED Pendant requires a constant current driver for proper operation. Incorrect polarity from the driver will result in the LEDs not illuminating.

**CAUTION:** Turn off power to electrical box before installing

- Carefully unpack parts. Remove Mounting Plate Screws (G) and Canopy (D) from Mounting Plate (A).
   Connect the LED Driver Leads to the House Supply Wires with Wire Nut Connectors (C) as shown: Black Driver
   Lead to Black House Supply Wire, White Driver Lead to White House Supply Wire and House Ground Wire to
   the Canopy Ground Wire. Secure Mounting Plate (A) to the Outlet Box with Mounting Screws (B).
- 2. Connect the LED Driver Leads to the Pendant Cord Leads with Wire Nut Connectors (C) as shown: Blue Driver Lead to Braided Outer Lead (-) and Red Driver Lead to Clear Inner Lead (+). Carefully push the wires and wire nuts back into the Outlet Box.
- 3. Align Canopy Screw Openings (F) with Mounting Plate Screw Openings (E). With the openings aligned, install Canopy (D) onto Mounting Plate (A) by re-installing the Mounting Plate Screws (G) to secure Canopy (D) in place.
- 4. To raise the pendant cord height, push pendant cord through Strain Relief. The lower cord height, push up the Strain Relief and pull cord down. Proceed to glass installation.

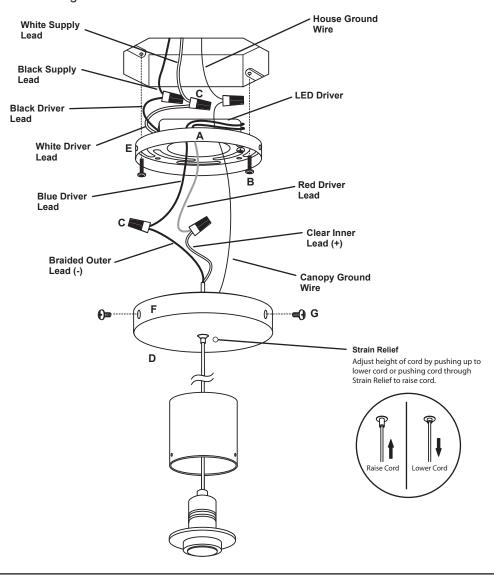

All electrical connections and the installation of this fixture must be in agreement with local codes, ordinances or the NEC (National Electric Code) or CEC (Canadian Electrical Code).

Do not connect this fixture to an electrical system that does not provide a means for equipment grounding.




## **GLASS SHADE INSTALLATION GUIDE**

6695 Taylor Rd. Blacklick, OH 43004 www.besalighting.com

## Use With these Models:

- Wanda 12
- Zito 18 & 22
- 1. Begin by installing LED socket (A) into Decorative Cap (B) with the Posts (C). **NOTE: Decorative Cap shall rest on LED socket.**
- 2. Install approximately 1/4" of Posts (C) into the Decorative Cap (B). Then install Glass by aligning the holes of the Glass (D) with the Posts (C). Once aligned handscrew or use an alan wrench to screw Posts into Glass holes.
- 3. Restore power.

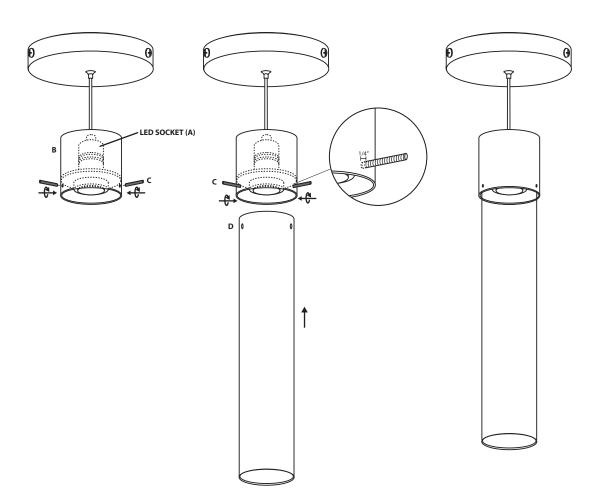

## NOTE:

Glass Shade is for instructional purposes. Actual Glass Shade may vary in size and shape.